

Accessories

Jasic Evo handheld remote control (wireless)



Order code	Suitable machine	Remote control function	Range
HRC-02	EM-160C / EM-200C EM-200CT / EM250CT	On MIG non-synergic mode: adjust wire feeding speed and welding voltage On MIG synergic mode: adjust welding current, and welding voltage On Lift TIG mode: Adjust welding current	30M
	ET-200 / ET-200P ET-200P ACDC	DC TIG: adjust welding current DC pulse TIG: adjust welding current and pulse frequency AC (pulse) TIG: adjust welding current and AC balance	

Jasic Evo handheld remote control (wired)



Order code	Suitable machine	Remote control function	Range
HRC-04 (3 pin connector)	EA-160 / EA-200	Adjust welding current on MMA mode and Lift-TIG mode	15m (5m wire is fitted)
HRC-01 (9 pin connector)	EM-160C / EM-200C EM-200CT / EM250CT ET-200 / ET-200P ET-200P ACDC	Adjust welding current on MMA mode only	

Jasic Evo foot pedal remote control (wireless)



Order code	Suitable machine	Remote control function	Range
FRC-02	EM-160C / EM-200C EM-200CT / EM250CT	Adjust welding current on Lift TIG mode only	30M
	ET-200 / ET-200P ET-200P ACDC	Adjust welding current on TIG mode	

Jasic Evo foot pedal remote control (wired)



Order code	Suitable machine	Remote control function	Range
FRC-01	EM-160C / EM-200C EM-200CT / EM250CT ET-200 / ET-200P ET-200P ACDC	Adjust welding current on TIG mode	15m (5m wire is fitted)

Micro Jasic Evo handheld remote control (wireless)



Order code	Suitable machine	Remote control function	Range
HRC-03	EA-160 / EA-200	Adjust welding current on MMA and TIG mode	30m